# System Sensor*

Verifies communication link between the processor and internal device

| Green LED | Orange LED | Outcome |
|---|---|---|
| On | On | System OK |
| Blinking | On | Troubleshoot |
| Off | On | Replace battery prior to further troubleshooting |
| Off | Off | Sensor needs replacing |

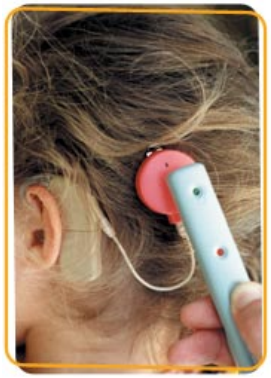

**This device does NOT work with the **Harmony** due to the built-in LED*